

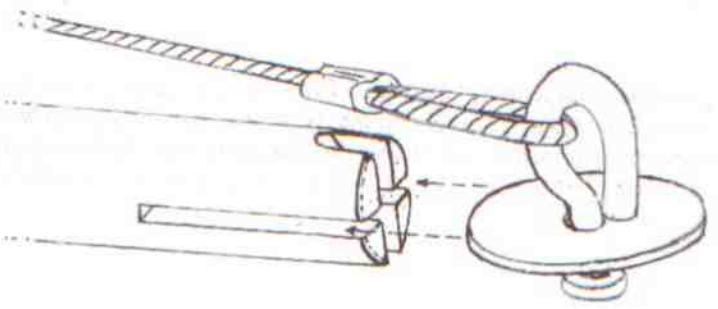
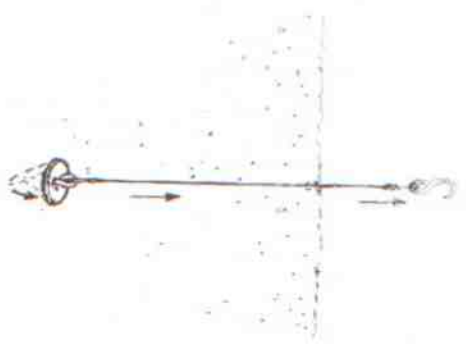


Instructions for Pogostick drivers

Loading in proper position.

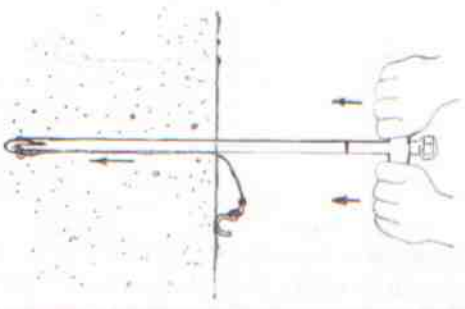

Anchor properly loaded.

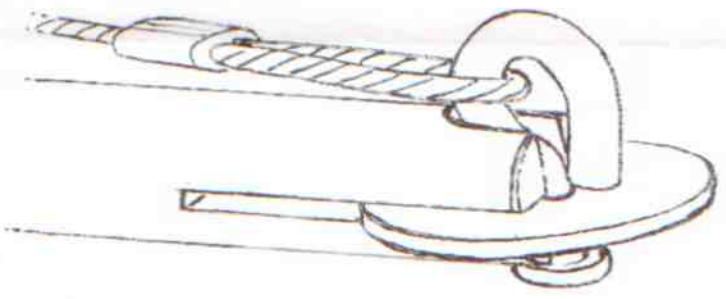

Pogostick Anchors The Snare Shop



You MUST Load your driver Correctly!!!! This is the most important part of trouble free Trapline use! The anchor goes in the driver many different ways,...BUT ONLY ONE CORRECT WAY!!!! You must learn this!!!!

- When the anchor is loaded correctly, it completely "captures" the tip!
- Correct position is with the eye side of the rivet to the waterfall, or angled side, of the drivers wide slot, and the button side of the rivet HOOKED on the other side of the driver. It is VERY important that the button remains hooked until the washer is touching the ground! Then the pressure of the drive will hold the driver in place. Drive or "push" the anchor in without lifting the driver off the anchor until it has reached the desired depth.
- The openable side of the eye hits the ground first.
- When driving a Pogo, the washer hits the rock first and has a chance to "Roll" past it. The washer takes the damage first,...then the driver. You have that amount of hammer blows to change your mind. Try them in good soil first, so you can see how easy and powerful they are. They will earn your confidence. Then move on to more challenging soils. I STRONGLY recommend driving a *smooth* pilot rod FIRST to displace the rocks and find the path.



LOAD IT RIGHT!

WHEN YOU HIT A BIG ROCK... MOVE


LOADED INCORRECTLY!

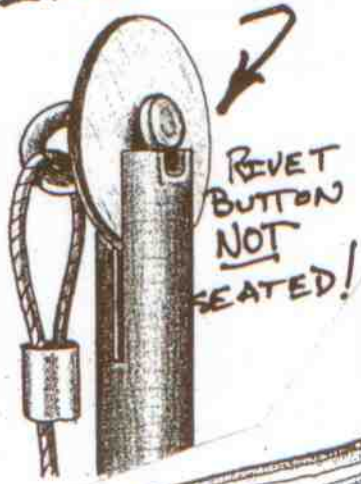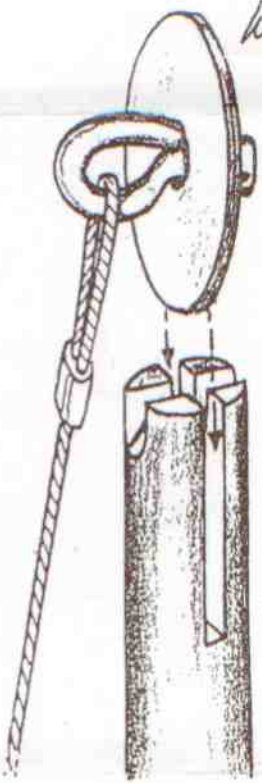


LOADED CORRECTLY

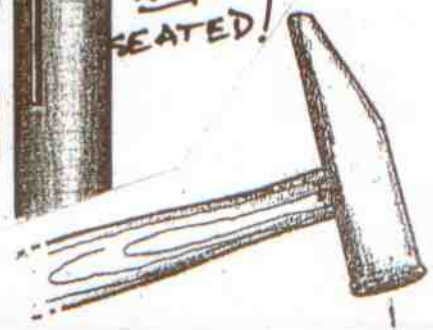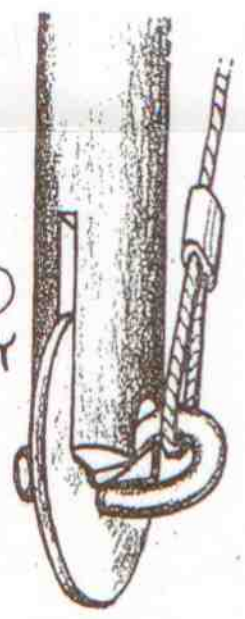

The Snare Shop
858 E US Hwy 30
Carroll, IA 51401

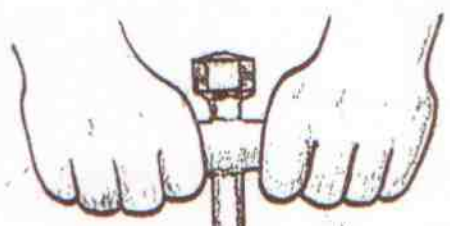

DRIVE OR PUSH

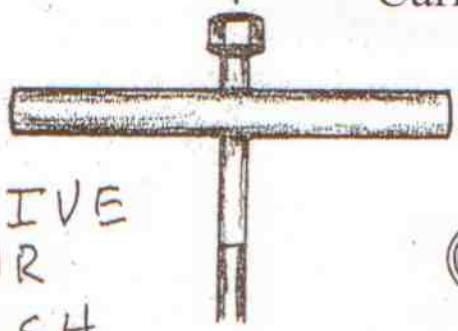

SPLIT RING

SET!

